

# Remote Condition Monitoring

Application Note 035



# Contents

<b>Introduction</b>	<b>3</b>
<b>EDM – Remote Condition Monitoring (RCM)</b>	<b>4</b>
Creating Projects	4
Creating Remote Spider Systems and Tests	4
Test Configuration	4
Alarms and Limits Configuration	4
Recording and Event Actions	5
Black Box Mode	5
Simultaneously Monitoring Multiple Tests	6
Alarm Status	6
Remote Downloads	6
Batch Operations and Data Usage	7
Conclusion	7

## Introduction

Remote Condition Monitoring (RCM) by Crystal Instruments is designed for the remote monitoring of equipment or structures that are inaccessible to configure within a local network. Common applications and examples of remote condition monitoring include the monitoring of vibrations during the transportation of equipment, monitoring vibrations on bridges and structures close to rails or roadways, and monitoring vibrations caused by rotating windmills on the ground. (Figure 1.1)

The type and intensity of these vibrations can potentially cause a multitude of problems; from damaged equipment during transportation to structural damages on a bridge.

Continuous monitoring with auto alarms and notifications assists in monitoring the health while also providing alerts to unusual and potentially catastrophic behavior on systems or structures.

Crystal Instruments has developed EDM - Remote Condition Monitoring (RCM) to extend the capabilities of Dynamic Signal Analysis (DSA). The integration of these features with the Spider platform achieves reliable results in monitoring remote equipment and devices.

When operating in EDM-RCM mode, multiple Spider front-ends featuring any channel count can be remotely mounted and connected through a mobile wireless gateway using cellular data connectivity. Each Spider system is accessible through EDM-RCM software by using a Static Public IP address with a connected modem. The use of a Static Public IP address with the modem ensures remote connectivity across the world.

The specially designed EDM-RCM



Figure 1.1

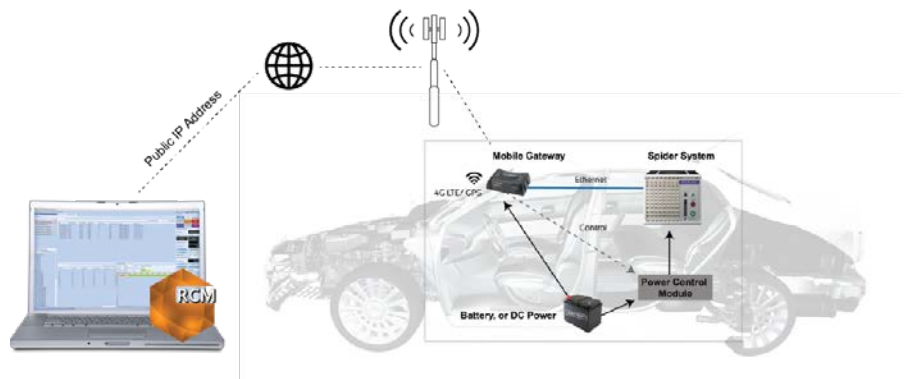 


Figure 1.2

software simultaneously connects multiple such Spider systems in addition to providing updated results of essential data for all Spider front-ends located throughout the world. The software provides a live view of data from any Spider system as needed and downloads recordings from any or all Spider front-ends for further analysis and inferences. (Figure 1.2)

The capability of Spider systems

to operate in Black Box mode has been fully utilized to ensure the continued operation of Spider front-ends regardless of their connection to the host software. This ensures the reliability of RCM during times when cellular connectivity is poor or nonexistent.

This paper discusses the key elements of setting up different Spider front-ends with a Public IP address provided by a cellular network

provider. Also discussed is the procedure to set up EDM-RCM mode to simultaneously connect to and track the status of all devices.

## EDM – Remote Condition Monitoring (RCM)

### Creating Projects

The EDM-RCM software module was developed using strong features from the Dynamic Signal Analysis (DSA) module. A new concept called Project is introduced, which consists of multiple tests grouped together for the purpose of monitoring. (Figure 2.1)

Multiple such projects can be created to group specific tests together to aid in monitoring.

Once a project is created, an option to add existing tests or to create new tests is available. This flexibility gives users an option to include one test in several projects. (Figure 2.2)

### Creating Remote Spider Systems and Tests

Spiders have traditionally been configured to communicate with EDM within the local network. With the help of an upgraded infrastructure from cellular service providers and the ever-increasing network of satellites, any area on the planet is within the reach of communication using the data network from wireless carriers. Remotely located Spiders can be accessed from the base station and data can be transferred through the internet using a dedicated public IP address. This IP address is used to configure remote Spider systems using the traditional Spider Configuration on EDM. (Figure 2.3)

Once the IP address is entered, EDM initiates a connection to the remote IP address in a similar method to EDM connecting a Spider to a local network. Once the Spider is detected

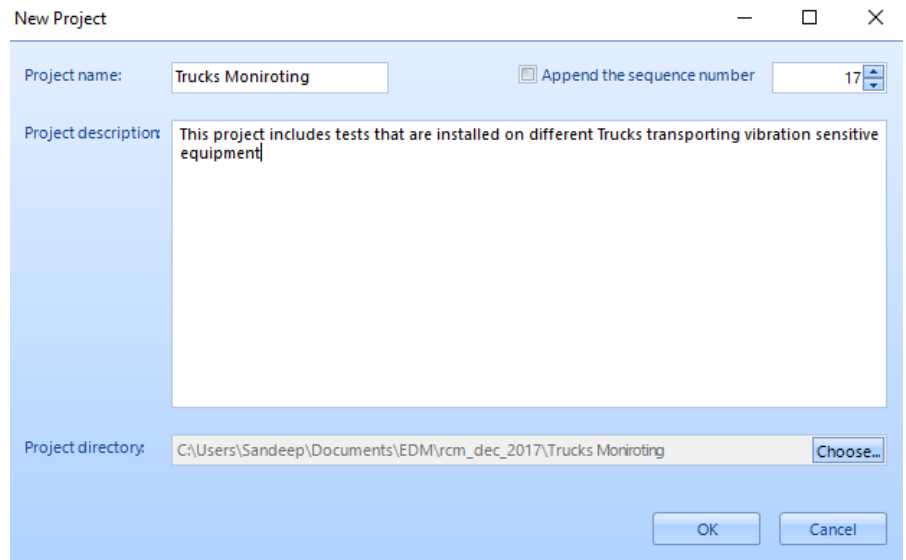 


Figure 2.1

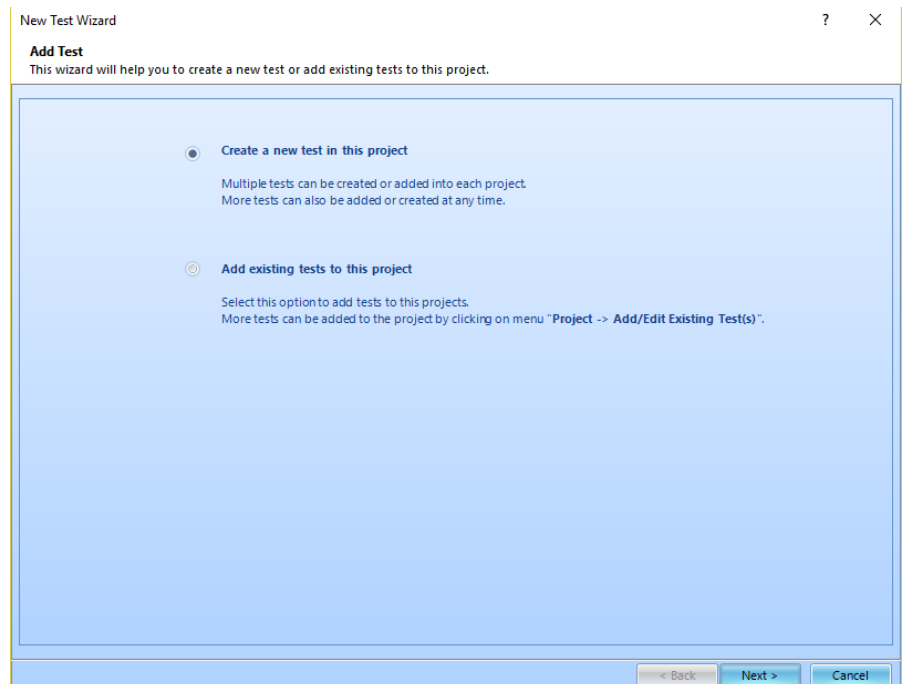 


Figure 2.2

at the Public IP, a system can be created. EDM will then associate the IP address with the created system to enable continuous monitoring.

Once the required systems are created, multiple tests can be created as each Spider system is added to the project. (Figure 2.4)

Tests can be created by assigning a Spider system to the test using

a procedure similar to EDM-DSA mode. The systems could be locally or remotely located.

### Test Configuration (Figure 2.5)

### Alarms and Limits Configuration

Remote monitoring is primarily continuous and setting up limits to trigger alarms and notifications is one

of the key aspects of its functionality.

Spiders across all platforms are designed to store multiple limits for each of the signals and to perform comparisons. The user configured events are then triggered when any signal meets the defined limits. (Figure 2.6)

A detailed set of limits for both raw time signals or frequency signals can be defined. Limits can also be defined for the statistical signals of Peak and RMS.

Recording and Event Actions

Tripping Alarms could result in different interpretations for different applications. To accommodate all applications and all scenarios, EDM-RCM is equipped with a range of Event action rules including the most popular recording-on-events feature.

Recordings on specific events can be configured using the Save/Recording setup from the test configuration. (Figure 2.7)

Several combinations of recordings can be set along with the desired time duration of recording to suit all applications.

Event action rules provides several easy-to-configure actions for user-defined events or pre-defined events. The email feature, in particular, is extremely helpful while monitoring devices remotely. (Figure 2.8)

Specific emails can be configured for specific events to enable clear distinctions during the occurrence of multiple events across multiple remotely located Spiders.

Black Box Mode

The Spiders are equipped with a Digital Signal Processor containing a fully uploaded algorithm. This enables the Spider to operate independently without support from

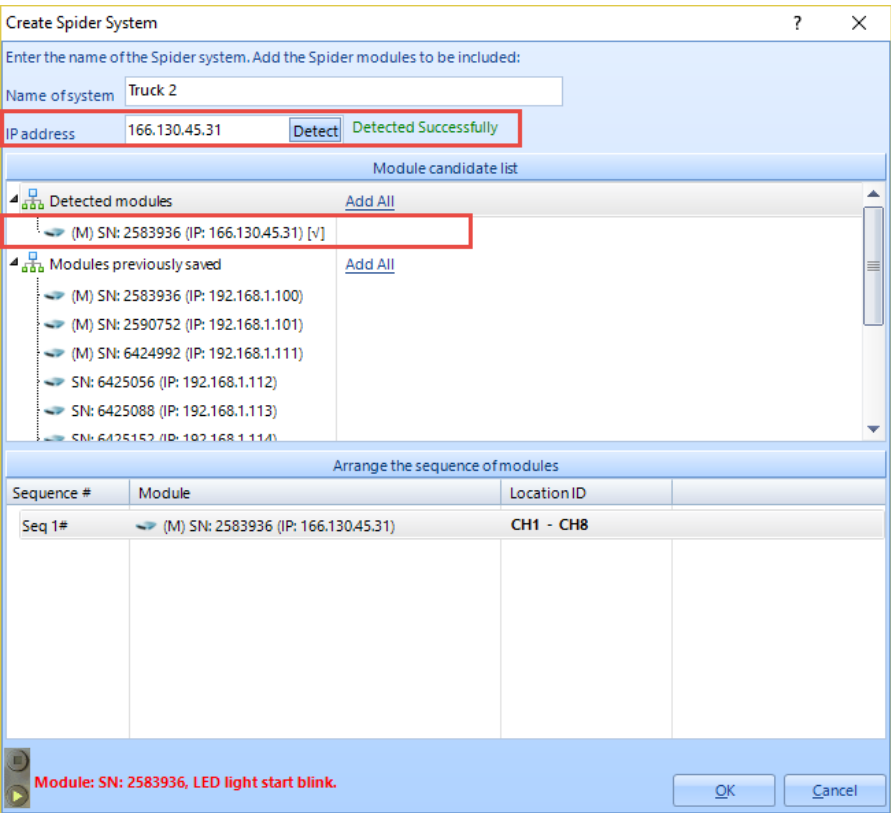 


Figure 2.3

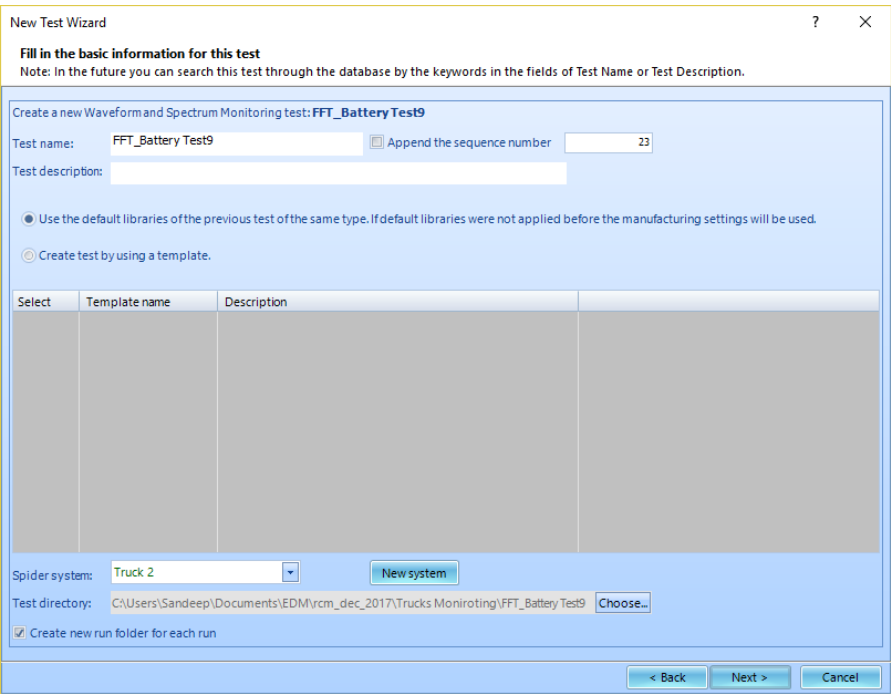 


Figure 2.4

a host PC. This major advantage, known as Black Box Mode, is a key element for remote monitoring. The monitoring is not interrupted by lost data connections or a sudden shut

down of the PC, thus providing an extremely robust system. Upload user created tests to the Spider. The Spider will then operate

in Black Box mode. EDM will periodically connect to the Spider during its operation in Black Box mode to extract essential data and to update the status of each test. (Figure 2.9)

Live signals can be viewed for a selected Spider system during its operation in Black Box mode.

### Simultaneously Monitoring Multiple Tests

The interface of EDM-RCM contains a default view that enables the Project Status display. The Project Status includes: Running Status, Connection Status, Time Elapsed, GPS Coordinates, Active Alarms, and Number of Files Recorded or Saved.

The status of each Spider can be automatically refreshed periodically using a user customizable time setting. Otherwise, each Spider front-end can be manually refreshed to receive updates on the status. (Figure 2.10)

When live data is required for any test, connect to the specific test and configure the Signal Display tab to stream live data from the Spider to the EDM software. (Figure 2.11)

### Alarm Status

There are several built-in features within the EDM-RCM software to monitor the status of Tests, Alarms or Recordings.

Project Status shows the Spider systems that have triggered an alarm by highlighting the tests according to the set thresholds. (Figure 2.12)

The active Alarm status within the Project Status window shows the number of times the alarm was tripped since a user’s most recent check.

To receive further insight on the alarms, a detailed view of the alarms

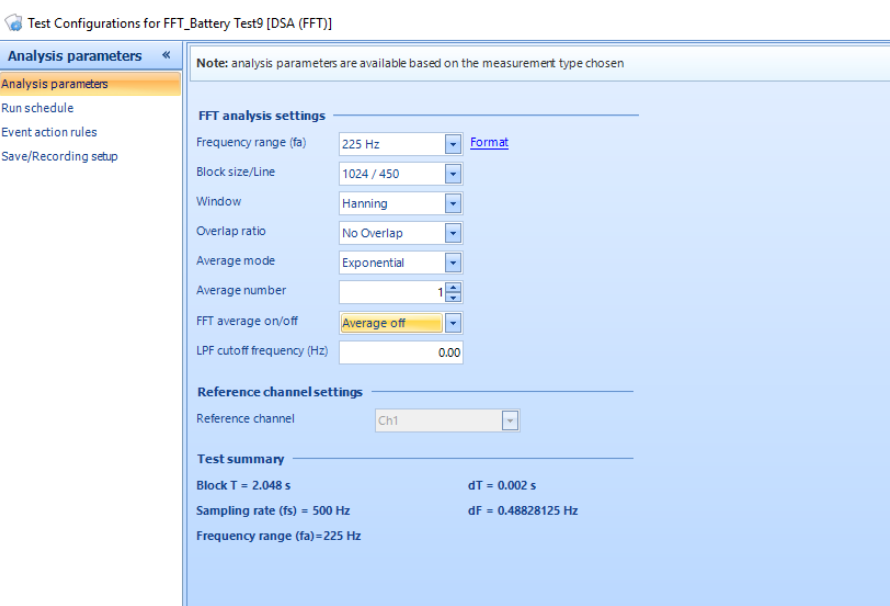 


Figure 2.5

Apply Alarm Limits							
Signal name	Limit name	As low limit	As high limit	As warning limit	As alarm limit	Exceeding points	Event strings
Ch1	Ch1_Limit	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	0	Time exceeds high alarm limit
Ch2	Ch2_Limit	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	0	Time exceeds high alarm limit
Ch3	Ch3_Limit	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	0	Time exceeds high alarm limit
Ch4	Ch4_Limit	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	0	Time exceeds high alarm limit
Peak_Ch5	Peak_Ch5_Limit	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	0	Peak exceeds high alarm limit
Peak_Ch6	Peak_Ch6_Limit	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	0	Peak exceeds high alarm limit
RMS_Ch6	RMS_Ch6_Limit	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	0	RMS exceeds high alarm limit
RMS_Ch7	RMS_Ch7_Limit	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	0	RMS exceeds high alarm limit
APS(Ch1)	APS(Ch1)_Limit	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	0	APS exceeds high limit
APS(Ch2)	APS(Ch2)_Limit	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	0	APS exceeds high limit
APS(Ch3)	APS(Ch3)_Limit	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	0	APS exceeds high limit
APS(Ch4)	APS(Ch4)_Limit	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	0	APS exceeds high limit

Insert Limit Check ON to schedule

Add limit

Edit limit

Remove limit

OK

Cancel

NOTE: Limiting can be enabled or disabled by turning on or off the limit check from control panel or run schedule.

Figure 2.6

is provided in the Alarm Status window. This window is specific for each test and the details for each active test is displayed in this window. (Figure 2.13)

An overview of the alarm status for an active Spider front-end is also available in the control panel. (Figure 2.14)

This provides a quick glance of the events occurring on the remote Spider.

Once the alarms have been viewed, the alarms can be reset for the active

Spider front-end or for all Spider front-ends from the control panel. (Figure 2.15)

This will reset or clear all the alarms once the reason for alarms have been addressed.

### Remote Downloads

Another critical feature is to download the recordings (raw time or processed time or frequency signals) to further post-process the data and improve the diagnostics. (Figure 2.16)

EDM-RCM provides a comfortable



method to view the available files for download from the Project status. It also provides a convenient feature to download from a single Spider or all Spiders in the project. (Figure 2.17)

Batch Operations and Data Usage

The control panel for RCM is designed to operate on an active Spider front-end or on all Spider front-ends. Batch operations such as Start All Spider Systems or Stop All are available for convenient application during the monitoring of many Spider systems. (Figure 2.18)

Another vital feature is the transmission of data through a wireless network. Since data transmitted through a wireless service may incur costs based on the data usage, a data usage indicator has been added. Live signals and status update intervals can be appropriately defined based on the available data limits.

Conclusion

The Spider capabilities have been completely harnessed by designing a solution that addresses the needs of Remote Monitoring. With the available feature set, any Spider hardware integrated with the EDM-RCM software module is deployable in static structures or moving vehicles to provide complete and reliable Remote Monitoring.

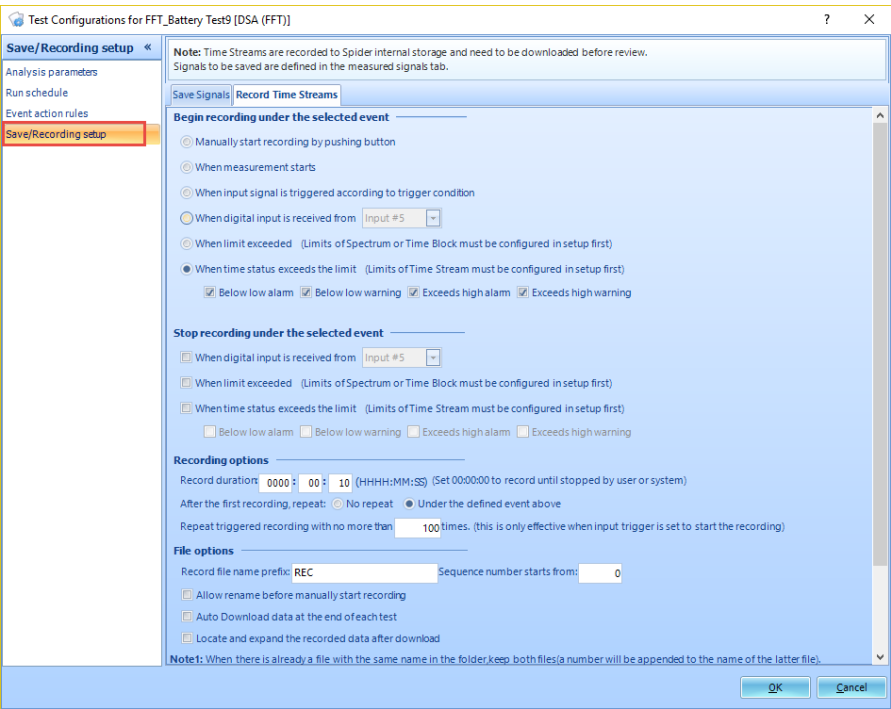 


Figure 2.7

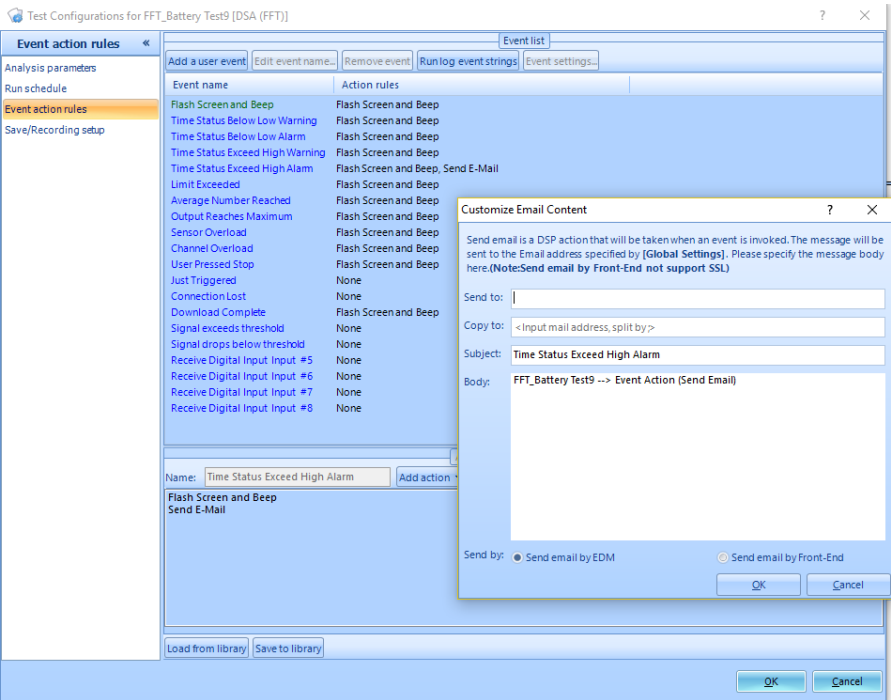 


Figure 2.8

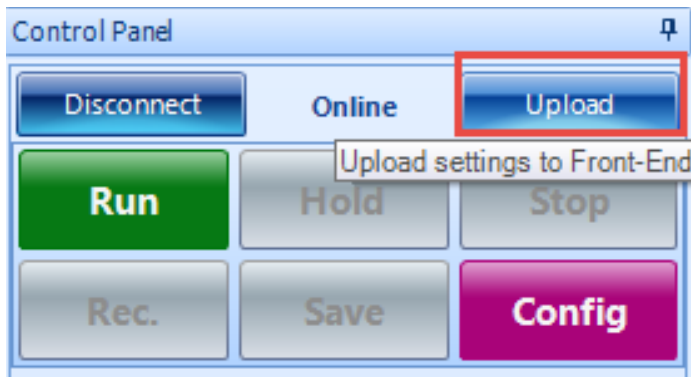


Figure 2.9

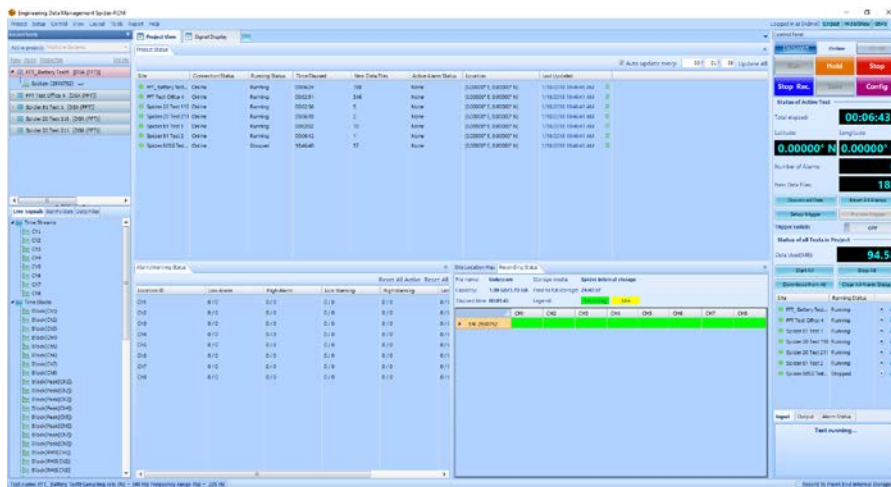 


Figure 2.10

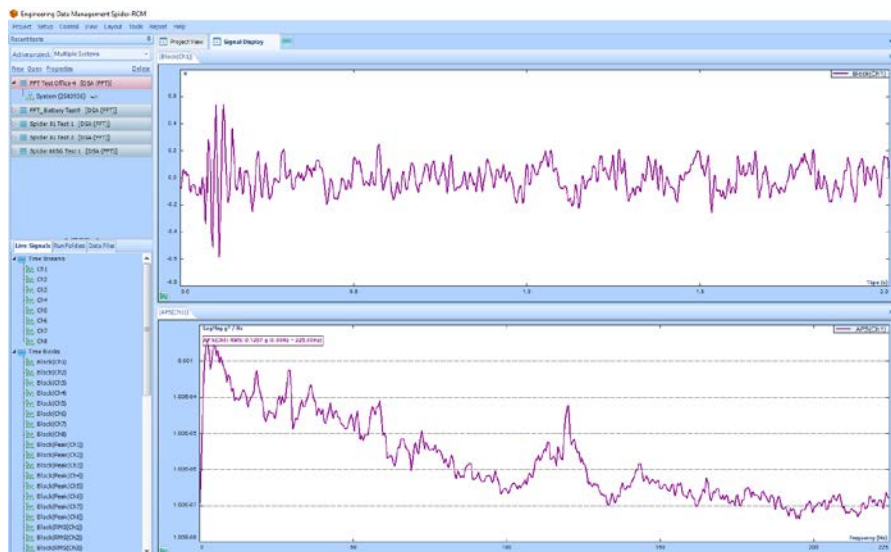


Figure 2.11



Object Status							
Id	Connection Status	Running Status	Time Elapsed	New Data Files	Active Alarm Status	Location	Last Updated
1	WPT Test Office 4...	Online	Running	00:05:43	346	HighAlarm(2)	(0.00000° E, 0.00000° N)
2	WPT Battery Test1	Online	Running	01:33:30	205	None	(0.00000° E, 0.00000° N)
3	Spider 20 Test 110	Online	Running	01:30:08	5	None	(0.00000° E, 0.00000° N)
4	Spider 20 Test 211	Online	Running	01:33:30	2	None	(0.00000° E, 0.00000° N)
5	Spider 81 Test 1	Online	Running	01:29:14	10	None	(0.00000° E, 0.00000° N)
6	Spider 81 Test 2	Online	Running	01:33:24	1	None	(0.00000° E, 0.00000° N)
7	Spider 80SG Test...	Online	Stopped	20:13:52	97	None	(0.00000° E, 0.00000° N)

Figure 2.12

Alarm/Warning Status							
Location ID	Low Alarm	High Alarm	Low Warning	High Warning	Limit Exceeded	Reset All Active	
						Reset Active	Reset All
Ch1	0 / 0	7 / 7	0 / 0	0 / 0	0 / 0		↺
Ch2	0 / 0	0 / 0	0 / 0	0 / 0	0 / 0		↺
Ch3	0 / 0	0 / 0	0 / 0	0 / 0	0 / 0		↺
Ch4	0 / 0	0 / 0	0 / 0	0 / 0	0 / 0		↺
Ch5	0 / 0	0 / 0	0 / 0	0 / 0	0 / 0		↺
Ch6	0 / 0	8 / 8	0 / 0	0 / 0	0 / 0		↺
Ch7	0 / 0	8 / 8	0 / 0	0 / 0	0 / 0		↺
Ch8	0 / 0	8 / 8	0 / 0	0 / 0	0 / 0		↺

Figure 2.13

Low Alarm  
(Active / Total)

0/0

Reset

High Alarm  
(Active / Total)

31/31

Reset

Low Warning  
(Active / Total)

0/0

Reset

High Warning  
(Active / Total)

0/0

Reset

Limit Exceeded  
(Active / Total)

0/0

Reset

Input

Output

Alarm Status

Figure 2.14

Object Status							
Id	Connection Status	Running Status	Time Elapsed	New Data Files	Active Alarm Status	Location	Last Updated
1	WPT Test Office 4...	Online	Running	00:05:43	346	HighAlarm(2)	(0.00000° E, 0.00000° N)
2	WPT Battery Test1	Online	Running	01:33:30	205	None	(0.00000° E, 0.00000° N)
3	Spider 20 Test 110	Online	Running	01:30:08	5	None	(0.00000° E, 0.00000° N)
4	Spider 20 Test 211	Online	Running	01:33:30	2	None	(0.00000° E, 0.00000° N)
5	Spider 81 Test 1	Online	Running	01:29:14	10	None	(0.00000° E, 0.00000° N)
6	Spider 81 Test 2	Online	Running	01:33:24	1	None	(0.00000° E, 0.00000° N)
7	Spider 80SG Test...	Online	Stopped	20:13:52	97	None	(0.00000° E, 0.00000° N)

Figure 2.15

Site	Connection Status	Running Status	Time Elapsed	New Data Files	Active Alarm Status	Location	Last Updated
FFT Test Office 4...	Online	Running	0055:43	548	HighAlarm-20	(0.00000° E, 0.00000° N)	1/15/2018 12:13:52 PM
FFT_Battery Test9	Online	Running	01:03:30	205	None	(0.00000° E, 0.00000° N)	1/18/2018 12:13:52 PM
Spider 20 Test 110	Online	Running	01:00:08	5	None	(0.00000° E, 0.00000° N)	1/18/2018 12:13:52 PM
Spider 20 Test 211	Online	Running	01:03:30	2	None	(0.00000° E, 0.00000° N)	1/18/2018 12:13:52 PM
Spider 81 Test 1	Online	Running	01:29:14	10	None	(0.00000° E, 0.00000° N)	1/18/2018 12:13:52 PM
Spider 81 Test 2	Online	Running	01:03:04	1	None	(0.00000° E, 0.00000° N)	1/18/2018 12:13:52 PM
Spider 805G Test...	Online	Stopped	20:13:52	97	None	(0.00000° E, 0.00000° N)	1/18/2018 12:13:52 PM

Figure 2.16

Number of Alarms:
31

New Data Files:
346

Download Data
Reset All Alarms

Setup trigger
Preview trigger

Trigger switch:
OFF

Status of all Tests in Project

Data Used(MB):
694.39

Start All
Stop All

Download from All
Clear All Alarm Status

Site	Running Status	
FFT Test Office 4...	Running	↓
FFT_Battery Test9	Running	↓
Spider 81 Test 1	Running	↓
Spider 20 Test 110	Running	↓
Spider 20 Test 211	Running	↓
Spider 81 Test 2	Running	↓
Spider 805G Test...	Stopped	↓

Figure 2.17

Number of Alarms:

31

New Data Files:

346

Download Data

Reset All Alarms

Setup trigger

Preview trigger

Trigger switch:

OFF

Status of all Tests in Project

Data Used(MB):

694.39

Start All

Stop All

Download from All

Clear All Alarm Status

Site	Running Status	
FFT Test Office 4...	Running	
FFT_ Battery Test9	Running	
Spider 81 Test 1	Running	
Spider 20 Test 110	Running	
Spider 20 Test 211	Running	
Spider 81 Test 2	Running	
Spider 805G Test...	Stopped	

Figure 2.18

Crystal Instruments Corporation  
2090 Duane Avenue  
Santa Clara, CA 95054

Crystal Instruments Testing Lab  
15661 Producer Lane, STE H  
Huntington Beach, CA 92649

Crystal Instruments Testing Lab  
1548A Roger Dale Carter Boulevard  
Kannapolis, NC 28081

Phone: +1 (408) 986-8880  
Fax: +1 (408) 834-7818  
[www.crystalinstruments.com](http://www.crystalinstruments.com)

© 2023 Crystal Instruments Corporation. All Rights Reserved. 08/2023

Notice: This document is for informational purposes only and does not set forth any warranty, expressed or implied, concerning any equipment, equipment feature, or service offered or to be offered by Crystal Instruments. Crystal Instruments reserves the right to make changes to this document at any time, without notice, and assumes no responsibility for its use. This informational document describes features that may not be currently available. Contact a Crystal Instruments sales representative for information on features and product availability.